

# Planter with punch

Mark Rayner puts together an attractive, easy-to-make planter.



## You will need

- 21.5m treated fence palings (x2)
- 50mm galvanised nails
- Drill with 12mm drill bit
- Hammer
- Paintbrush
- Pencil
- Resene Lumbersider tinted to Resene Outrageous
- Resene Quick Dry
- Sandpaper
- Saw
- Set square
- Tape measure




**To get the look:**  
Pot up with hot orange marigolds to create a sizzling late summer planter.



**1** Measure, mark and cut four lengths of fence paling 400mm long and three lengths of fence paling 350mm long.



**2** Smooth any rough edges with sandpaper.

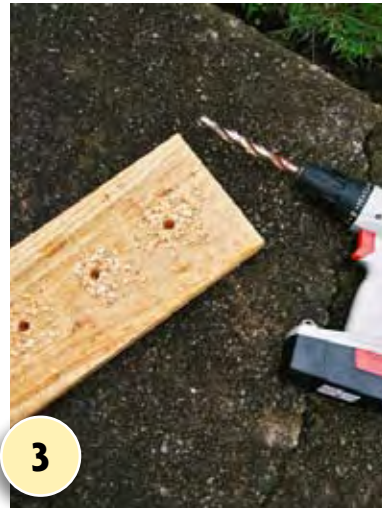

**3** Drill three drainage holes in one of the 350mm lengths of timber, as shown. This will form the base of the planter.



**4** Attach two of the 400mm lengths of timber to the base piece, as shown, fixing with 50mm galvanised nails.



**5** Attach the two remaining 350mm lengths of timber to the base and front of the planter, as shown, to form the sides of the planter. Fix with 50mm galvanised nails.



**6** Attach the remaining 400mm lengths of timber into position to form the front and back of the planter. Fix with 50mm galvanised nails.



**7** Apply one coat of Resene Quick Dry to the entire planter and allow two hours to dry.



**8** Apply two coats of Resene Outrageous to the entire planter, allowing two hours for each coat to dry.