

Sandpaper Saw



STEP 2

Assemble the base, sides and back of the window box, as shown, fixing with PVA glue and nails.



STEP 3

Place the front into position, fixing with PVA glue and nails.



STEP 4

Measure, mark and cut 2 x 600mm lengths of trim and fit to the front of the window box, as shown. Allow glue to dry.



STEP 5

Smooth any rough edges with sandpaper.



STEP 6

Drill 3 x 15mm drainage holes in the base of the window box.



## STEP 7

Carefully stir the Resene Woodsman stain before applying the first coat to the planter. Leave for 24 hours, then apply the final coat.


## HERE'S ANOTHER COLOUR OPTION:

The window box could also be painted with Resene Lumbersider, tinted to any colour from the Resene Range.

Make sure you prime the wood first, with Resene Quick Dry.

## SOME PLANTING IDEAS:

We used some potted colour for instant appeal, but this window box could also be used for growing small succulents, ornamental grasses or even culinary herbs.

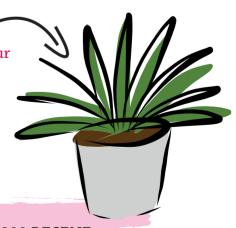



For more on paints phone 0800 RESENE (0800 737 363) or visit your Resene ColorShop or

www.resene.co.nz