



TO GET THE LOOK:

Mark painted the concrete paving with Resene Non-Skid Deck & Path paint tinted to Resene Scorched Clay.

Decking doormat

Mark Rayner creates a handy all-weather doormat using grooved decking and Resene Woodsman Decking Stain.

YOU WILL NEED:

Approx. 5.5m of 100mm x 25mm treated pine decking • Exterior PVA glue • 35mm treated pine self-embedding screws • Paintbrush • Paint stirrer • Pencil • Resene Woodsman Decking Stain tinted to Resene Kwila • Sandpaper • Saw • Screwdriver • Set square • Tape measure



1.

STEP ONE

Measure five 800mm lengths of treated pine decking. Use the back of the saw to mark 90-degree cutting lines across the timber, as shown.



2.

STEP TWO

Use these pencil lines to saw the decking into five equal lengths (these will form the top of the doormat).



3.

STEP THREE

In the same way, measure, mark and cut three 480mm lengths of decking to form the underneath supports. Smooth any rough edges with sandpaper.



4.

STEP FOUR


Place the five 800mm lengths of timber on a flat and stable surface, grooved side down, as shown. Leave a small gap between each.



5.

STEP FIVE

Position one of the underneath supports (grooved side up) across one edge, as shown, and fix with PVA glue and 35mm screws. Use a set square to ensure the timber is at right angles.

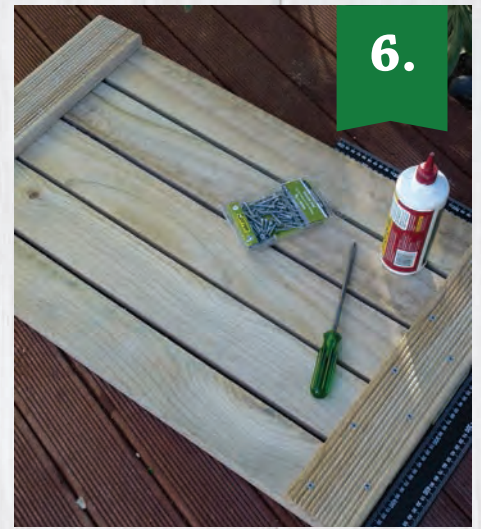

6.

STEP SIX

In the same way, fix a second support along the other edge. Again, use the set square to ensure the timber is at right angles.



7.

STEP SEVEN

Mark the midway point across the underside of the timber doormat.



8.

STEP EIGHT

Using this pencil mark as a guide, fix the third support across the centre of the doormat, as shown.



9.

STEP NINE

Carefully stir the Resene Woodsman Decking Stain with a paint stirrer.



10.

STEP TEN

Apply one coat of Resene Woodsman Decking Stain to the doormat, brushing in the direction of the grain.



11.

STEP ELEVEN

Continue until the entire doormat is coated with Resene Woodsman Decking Stain. Allow 24 hours before using doormat.

Resene
the paint the professionals use

For more on paints phone
0800 RESENE (0800 737 363) or
visit your Resene ColorShop or
www.resene.co.nz