

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Ways with wood
with Mark Rayner – 62


You will need:

- 40mm panel pins
- Clean cloth
- Drill with drill bits
- Hammer
- Paintbrush
- Pencil
- PVA glue
- Reclaimed bare wood (ours measured 20mm x 90mm)
- Resene Colorwood Whitewash
- Sandpaper
- Saw
- Screwdriver
- Set square
- Shelf hangers with screws (x2)
- Tape measure



Step one

Measure and mark the wood into two 640mm lengths and four 180mm lengths.

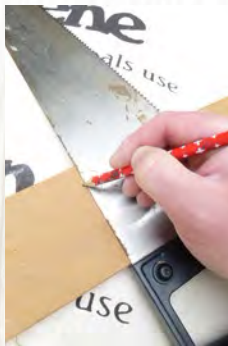

Step two

Use the back of the saw to make cutting lines, as shown.



Step three

Using the pencil lines as a guide, cut the pieces of wood to size.



Step four

Lightly sand the pieces of wood, taking care to smooth any rough edges.



Step five

Wipe off any sanding dust with a clean cloth.



Step six

Assemble the unit, as shown, fixing with PVA glue and panel pins. Use a set square to ensure corners are at right angles, and drill narrow pilot holes first to prevent the wood from splitting. Allow glue to dry.




Step seven

Apply one coat of Resene Colorwood Whitewash to the unit and allow to dry.




Step eight

Fix two shelf hangers to the back of the unit, as shown. Again, drill pilot holes first so as not to split the wood.

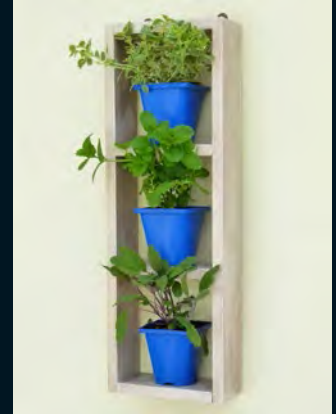

To get the look:

Mark painted the background wall with Resene SpaceCote Low Sheen Kitchen & Bathroom tinted to Resene First Light.

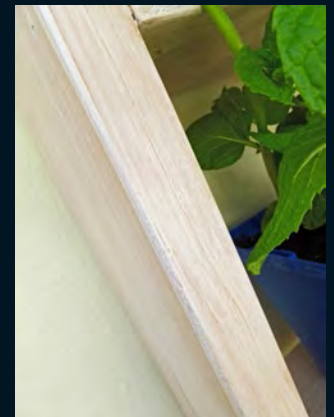

Other ideas:

For a more natural finish, and to enhance the grain, apply three coats of Resene Aquaclear satin over the bare wood.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.com/colorshops.

Check out more project ideas online www.resene.com/projects.