



**Smarten up a corrugated iron fence in a weekend using Resene Lumbersider in a subtle neutral tone.**



Difficulty level ★ easy ★★ moderate ★★★ challenging

Weekend DIY with Mark Rayner – 5

### You will need:

- Bucket
- Clean cloth
- Flat wooden paint stirrer
- Garden hose with running water
- Mineral Turpentine
- Paintbrush
- Resene Galvo One
- Resene Lumbersider tinted to Resene Go Ben
- Resene Paint Pot
- Resene Roof Wash and Paint Cleaner
- Stiff bristled brush



#### Step one

In a clean bucket, mix one part Resene Roof Wash and Paint Cleaner to three parts clean water.



#### Step two

Use a stiff bristled brush to wash down the fence, scrubbing off any dirt and dust.



#### Step three

Rinse the fence thoroughly with clean water and allow to dry.



#### Step four

Carefully stir the Resene Galvo One with a flat wooden paint stirrer.



#### Step five

Apply one coat of Resene Galvo One to the fence and allow twelve hours to dry.



#### Step six

Wash out brush in Mineral Turpentine, wiping off any excess with a clean cloth, and rinse the brush with warm soapy water followed by clean water. Leave brush to dry.



#### Step seven

Apply one coat of Resene Go Ben to the fence and allow two hours to dry.




#### Step eight

Apply a second coat of Resene Go Ben to the fence and allow two hours to dry.

### Top tip:

If the fence touches the ground, place a piece of thin board along the bottom of the fence to prevent soil from getting on the brush.

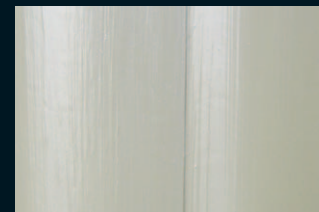

### Other ideas:

Use Resene Lumbersider tinted to Resene Boulder for a cool grey finish.

For more ideas and inspiration visit your local Resene ColorShop or [www.resene.co.nz](http://www.resene.co.nz) or [www.resene.com.au](http://www.resene.com.au).

Check out our special Artists section online [www.resene.co.nz/artists/artists\\_canvas.htm](http://www.resene.co.nz/artists/artists_canvas.htm) or [www.resene.com.au/artists/artists\\_canvas.htm](http://www.resene.com.au/artists/artists_canvas.htm).