



Create this fabulous faux verdigris effect using a combination of Resene colours.

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Weekend DIY with Mark Rayner – 15

You will need:

- Candle
- Glass pebbles
- Old terracotta candle holder (ours was purchased secondhand)
- Paintbrushes
- Resene Terracotta Sealer
- Resene Testpots in the following colours: Resene Mischka, Resene Padua and Resene Voltage
- Resene Multishield+ flat



Step one

Thoroughly wash the terracotta candle holder in warm soapy water, using an old paintbrush or scrubbing brush to remove any stubborn dust or dirt. Allow to dry.



Step two

Apply one coat of Resene Terracotta Sealer to the candle holder and allow to dry.



Step three

Apply one coat of Resene Mischka to the candle holder and allow two hours to dry.



Step four

Apply one coat of Resene Voltage to the candle holder and allow two hours to dry.



Step five

Apply a second coat of Resene Voltage to the candle holder and allow to dry.



Step six

Using a dry brush apply one light coat of Resene Padua to the candle holder, dabbing and brushing the paint on thinly to allow the base colour to show through. Allow two hours to dry.



Step seven

Apply two coats of Resene Multishield+ flat to the candle holder, allowing two hours for each coat to dry.




Step eight

Position the candle in the candle holder, as shown, and sprinkle a few glass pebbles around the base.



Top tip:

Mark painted the garden table with Resene Lumbersider tinted to Resene Chelsea Cucumber.

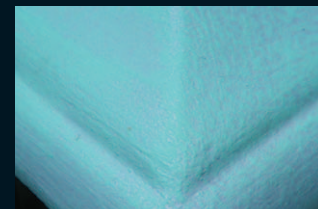

Other ideas:

For a rich rusty effect, lightly brush Resene Dark Rum and Resene Rope over a basecoat of Resene Copperhead.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.co.nz or www.resene.com.au.

Check out our special Artists section online www.resene.co.nz/artists/artists_canvas.htm or www.resene.com.au/artists/artists_canvas.htm.