

Thanks for purchasing your custom wallpaper from Resene WallPrint. To ensure that you get a great result, please read the instructions below, carefully. Your mural has been printed on a 'non-woven' substrate that is hung using a 'Paste the Wall' technique.

Recommended installation tools and supplies:

- Floor cover (optional)
- Step ladder
- Pencil
- Scissors
- Wall covering hanging brush
- Paste roller and tray
- Pasting brush
- Steam stripper and stripping knife (Only if you need to remove an old wall covering)
- Tape measure
- Spirit level or plumb line
- Sharp knife
- Sponge
- Wallpaper rubber roller
- Priming – pigmented sealer
- ShurStik size (100 gram)
- ShurStik Blue paste (400 gram)




Easy step-by-step instructions

Step 1: Check your custom wall panels...

Verify you have received all of the panels for your custom wall. Check that the design lines up and that the colours are even from one drop to the next. If not, please contact Resene.

Step 2: Prepare the wall...

- Clear furniture and other obstructions from your work area.
- It is recommended that you paint other surfaces before you start hanging the wall covering (doors, windows, ceilings, other walls).
- If there are any electrical installations in the wall (switches, sockets or similar) we recommend turning off the power.
- The wall surface should be clean, smooth, dry and free of debris.
- Priming with pigmented sealer is recommended in the following cases:
 - Old, damaged, or flaking paint.
 - On a wall with uneven surfaces, such as panelling.
- Lay out the cloth to protect the flooring.
- Draw a line to mark the width of the panel on the wall and plumb (distance A).

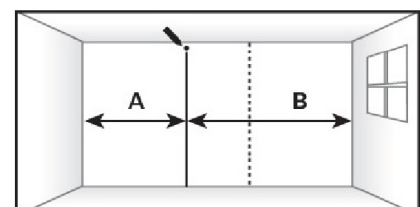

IMPORTANT:

This line must be VERTICAL to ensure proper installation of your mural.

Step 3: Paste the wall...

- The first step is preparing the paste. Follow the instructions on the packet.
- The ShurStik Blue paste mixes into a deep blue colour to allow you to see where you have applied it to the wall.
- Tip paste into your roller tray and apply the paste where your first drop of wallpaper is to be hung plus 5cm each side using the roller. The number shown on the bottom of each drop is the order to hang each drop.

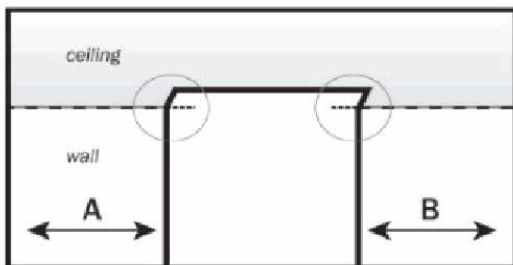


Figure 5: Align panel 1 with the horizontal reference guide at the intersection of the wall and the ceiling

Step 4: Install first panel...

- Start by placing the first panel at the top, using the vertical line drawn previously as a reference with 5cm past the intersection of the wall and the ceiling top of your wall.
- Smooth down the paper with the wall covering hanging brush or roller, working from the top centre to the bottom edges, ensuring that there are no air bubbles and that the edge stays on the pencil mark.

Step 5: Installing the rest of the panels...

- Once the first panel is hung correctly, start hanging the subsequent panels, taking the first panel edge as a reference. Place the following panel edge at the same level as the previous panel edge. Make sure you match the print of the two panels at eye level.



- Firmly press down the lengths of wallpaper with a rubber roller.
- Immediately after hanging each strip, carefully dab with a soft, slightly damp, clean cloth to remove any leaking adhesive.

Step 6: Trimming and finishing...

- Cut away excess material around an object (e.g. window or door).
- Using a straight edge, push the panel flush against the wall and into the joint/intersection between the wall and your door or window.



Step 7: Hanging your mural around light switches or sockets...

- Always switch off the electricity at the mains before you start working with electrical installations.
 1. Remove the fitting cover.
 2. Hang a panel over the fitting and smooth it very gently over it.
 3. Make a hole in the wall covering to mark the centre of the fitting using scissors.
 4. Remove the surplus wall covering from the fitting. Be careful when removing it, and never exceed the fitting cover size.
 5. Replace the fitting cover.

Step 8: Finishing your mural...

- Slight traces of adhesive on the surface can be removed with a soft, damp cloth once the wallpaper has dried. It is important that this cloth is clean.



When you come to redecorate, the wallpaper can be easily dry stripped.

We hope you enjoy your unique Resene WallPrint digital wallpaper.